USER NOTICE

OCCLUSAL FILM DRYING
FOR PERI-PRO PROCESSING

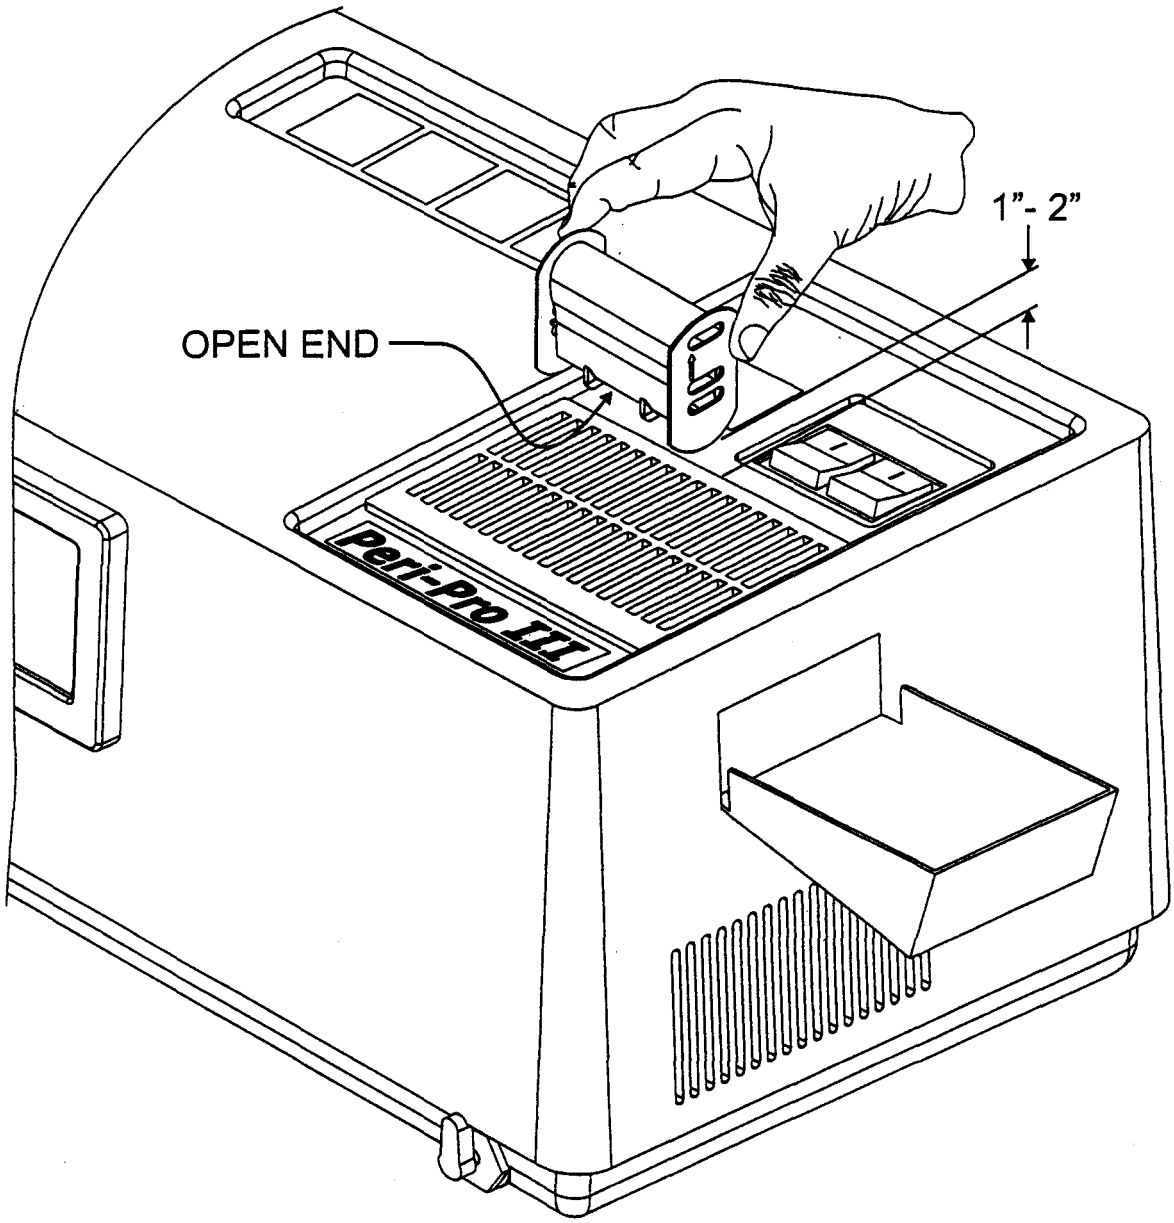

To assure complete drying of processed # 4 films, a manual assist may be needed, if so;

1. While the fan is blowing, hold the open end of the film in the carrier directly over the dryer grille, about 1"- 2" elevation is sufficient, and slowly pivot the carrier to have warm air blow on the outer surface.

2. 30-60 seconds should be enough time to adequately dry film.

3. Unload the dried film from the carrier when done.

JAN 1 2 2001